


**SPECIFICATIONS:**

1. CUT EXISTING GRAVEL STOP 6" WIDE AND BEND DOWN 90 DEGREES.
2. URETHANE CAULK RAISED STOP AREAS BEFORE INSTALLING SCUPPER.
3. INSTALL SCUPPER FLANGE IN BED OF MASTIC.
4. INSTALL NAILS AS PER DETAIL.
5. INSTALL 4 ALUMINUM POP RIVETS IN RAISED STOP AFTER INSTALLATION.
6. SCUPPERS TO BE PLACED 30 FEET O.C. STARTING 4 FEET FROM CORNERS ON FLAT ROOFS OR ON LOWER EDGES OF ALL SLOPED ROOFS.
7. WEATHER HEADS AND DOWN SPOUTS TO BE INSTALLED AS SPECIFIED.
8. NEVER INSTALL SCUPPERS OVER OR WITHIN 2 FEET OF GRAVEL STOP JOINT.
9. THE SCUPPER DESIGN IS TO BE ADAPTED TO FIT EACH PROJECT.
10. CONCRETE SPLASH BLOCKS 4" x 2' x 2' TO BE INSTALLED UNDER EACH SCUPPER. COUNTER SINK FLUSH WITH GROUND.
11. SCUPPER LOCATIONS ARE CRITICAL AND ARE TO BE SHOWN ON PLANS.

**DETAIL:**

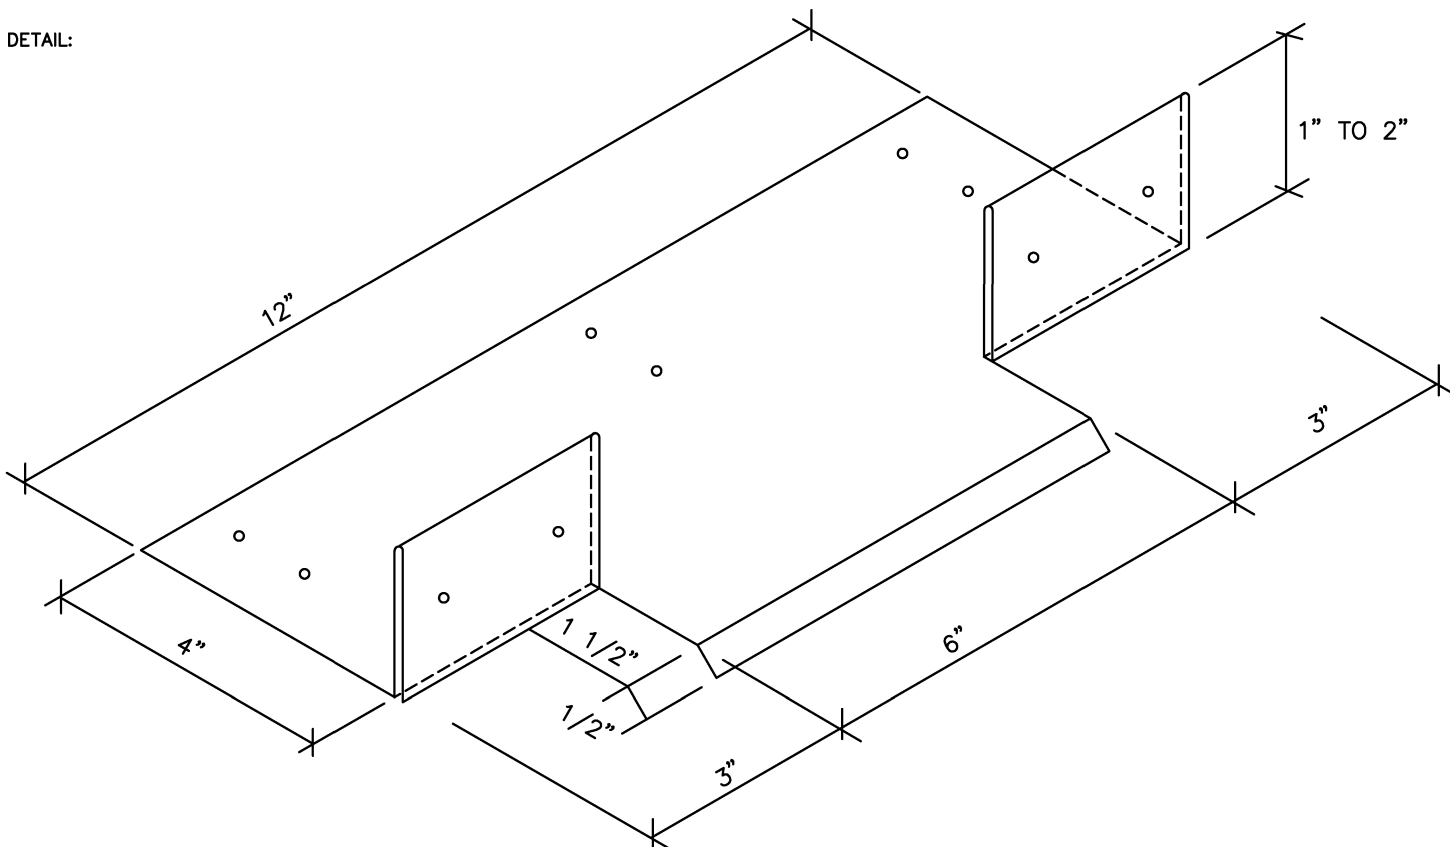

**TITLE: STANDARD SCUPPER**

**SPEC.SECTION : 07-60-00.03 APPENDIX C**

**DATE : 07/11/2019**

**pcs**   
**PINELLAS COUNTY SCHOOLS**